



## PFCL2F54 Instructions



### CHARGING BATTERY

**WARNING:** Never attempt to charge standard (non-rechargeable) batteries. Doing so could result in injury and will void the warranty.

This unit operates on one rechargeable 18650 Li-Ion battery (included) and we recommend fully charging it first. To do so, insert the battery into the charger following the polarity diagram shown on the charger. Flip out the charging plug on the back of the charger and plug it into a standard wall outlet. **IMPORTANT: Do not charge for longer than 5 hours or continue to charge once the light on the charger turns green.** Once the light on the charger changes from red to green, the battery is fully charged and should be removed from the charger.

### INSTALLING THE BATTERY

1. To access the battery compartment, unscrew the end cap (at the opposite end of the light) by turning it counterclockwise.
2. Insert the fully charged battery into the flashlight. The positive (+) end of the battery should be inserted first (toward the head of the light). Screw the end cap back on by turning it clockwise.

### USING THE FLASHLIGHT

1. To turn on the light, press the rubber Push Button Tail Switch (located at the opposite end of the light) until it clicks and the light turns on. This unit features five light modes: High, Medium, Low, Strobe and SOS.
2. To change the light mode, "soft press" the rubber Push Button Tail Switch by applying light pressure (if you press too hard it will click and turn off).
3. To turn the flashlight off, "hard press" the rubber Push Button Tail Switch until it clicks.
4. Recharge the battery when you notice the light becoming weaker.

## **WARRANTY**

*Cutting Edge Products, Inc.* extends a Lifetime warranty to the **PFCL2F54** for the product against defects in materials or workmanship, with the following exceptions:

1. The warranty does not cover damage resulting from exposure to water in excess of the IP65 rating, accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product, loss of parts, or recharging the unit in any manner not in accordance with the instructions above.
2. The warranty will be voided if the unit has been opened (with the exception of inserting the batteries according to the directions above) or tampered with in any way (unless by an Authorized Dealer) or if any unauthorized replacement parts have been used.
3. The lifetime warranty extends only to the flashlight and LED bulb only. The battery is excluded from the warranty because it will be damaged if the charging instructions above are not followed.

## **CONDITIONS OF SALE**

Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

## **TO OBTAIN SERVICE**

Contact the Authorized Dealer from whom you purchased this unit for Return Merchandise Authorization (RMA). The return unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.